



CUSTOM OVERLAY PANEL INSTRUCTIONS FOR MODEL DCE33

To make a drop in door panel that covers the door and the front of its aluminum edge, add the KHAND to cover the top edge and a cabinet pull that matches the pulls on surrounding cabinets to better blend in with the existing cabinetry.

Cut the filler panel to the dimensions shown. Apply the edge detail to the bottom, left and right sides.

The following directions are for a 3/4" x 15" w x 29" h panel door blank:

- 1 From the back side of the door cut a 1/16" w x 11/32" h rabbet on both sides and the bottom edge of the panel.
- 2 Set the saw blade to 1/4" height and cut groove in the edge of the door 7/32" from the back of the door.
- 3 On the hinge side of the door cut a 45-degree chamfer on the top with either a saw or a router.

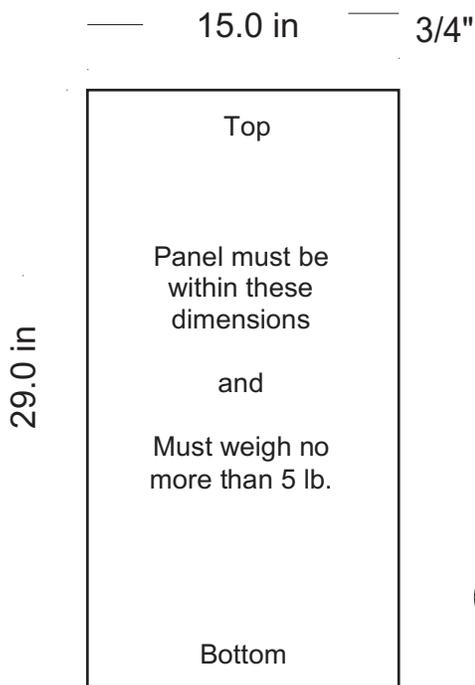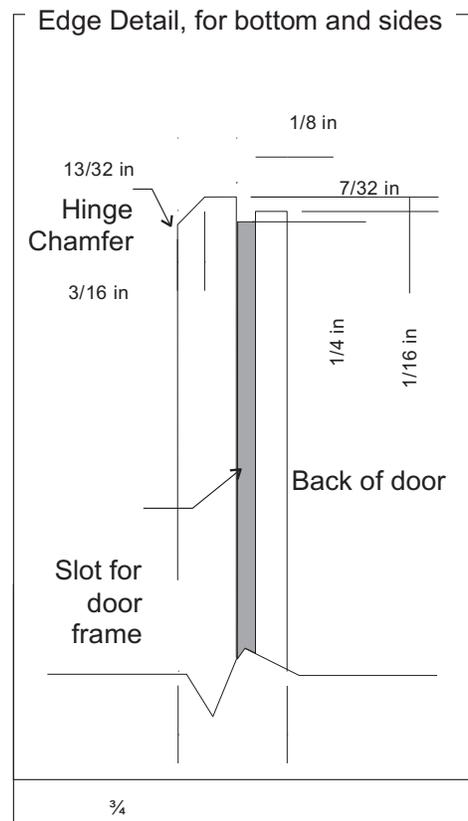


Panel must be within these dimensions


and

Must weigh no more than 5 lb.

Front View

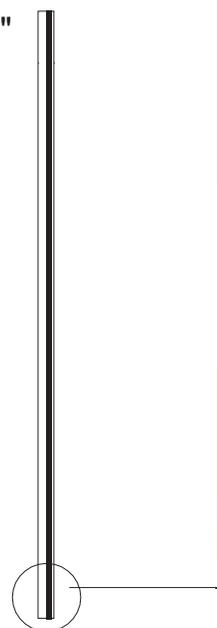

Side View

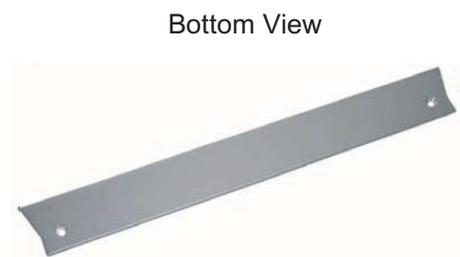

KHAND