

## SRN110 Descaling Instructions

Ice Making System/Water Reservoir

- 1 Turn machine off
- 2 Remove all ice from the bin
- 3 Remove scoop and fold metal bar flush to bin wall
- 4 Remove back panel by loosening thumb screws
- 5 Locate water valve On/Off knob. Turn the water Off by turning the water valve to the right
- 6 Push tab on front edge of reservoir and remove the cover
- 7 Pull drain hose to drain system and reattach
- 8 Add pre-mixed Scotsman Scale Remover into reservoir until full (Approximately 8 oz.)
- 9 Push and hold both ON/Off and Clean buttons for 5 seconds:
  - Time to Clean light will begin to blink
  - Auger motor only will operate for 10 minutes
  - Compressor will turn on
- 10 Allow compressor to run and continue to add remaining solution maintaining level at 1/2 full while unit makes ice
  - Compressor will shut off after approximately 40 minutes
- 11 Once all 16oz of solution has been used, push reservoir cover down and turn water back on by returning the valve to its original position
- 12 Pull drain hose to drain system and then reattach
- 13 Return reservoir cover and back panel
- 14 Clean bin by mixing some cleaner with hot water and scrub remaining scale
- 15 Rinse bin with hot water
- 16 Push and release On/Off to restart

Regular descaling and sanitizing of the bin and drain system is required




Scan QR Code for Cleaning Video

### STEP 4



### STEP 5

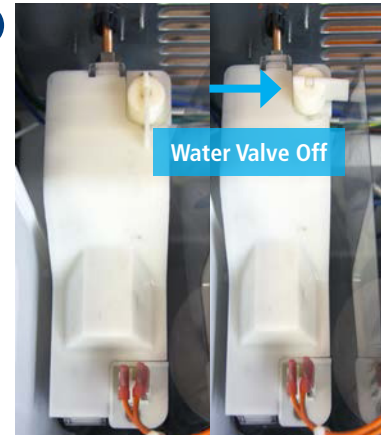

### STEP 6



### STEP 8



Part#19-0664 Clear One Pre-Mixed Scale Remover with Special Bottle

## Descaling & Sanitizing Instructions – All Pump Models

### Drain Pump System

- 1 Clean the bin liner of mineral scale by using any leftover descaling solution to scrub the scale off the liner. If none is left over, mix a solution of 2.5 ounces of Clear One Concentrated Scale Remover and 1 quart of water
- 2 After ice melts, pour 1 qt. of water down the bin drain until the pump turns on. Once pump turns on IMMEDIATELY stop
- 3 Once pump shuts off, add a mixture of 10 oz of water and 4 oz of descaling solution to bin drain. If the pump cycles during this process, then repeat step 2; making sure to stop pouring as soon as the pump turns on. Then repeat step 3
- 4 Let machine sit in off state for 1/2 an hour
- 5 Rinse the liner with hot water
- 6 Create a solution of sanitizer by mixing 1 gallon (4 liters) of clean, warm potable water (105-115°F) with 1.6 oz of locally approved sanitizer and sanitize the bin interior and flush the drain
- 7 Pour 1 qt. of water down the bin drain until the pump turns on. Once pump turns on IMMEDIATELY stop
- 8 Once the pump shuts off, mix 13 oz of clean, warm potable water (105-115°F) with 1 oz of locally approved sanitizer to sanitize the bin interior. If the pump cycles during this process, then repeat step 7; making sure to stop pouring as soon as the pump turns on. Then repeat step 8
- 9 Let machine sit in off state for 10 minutes
- 10 Rinse the liner with hot water
- 11 Push and release the On/Off button to restart ice making



Part #19-0653 Clear One  
Concentrated Scale Remover